

Ri-Treat and Ri-Scape Bristle Filter

The Ri Bristle Filter comes standard in our Ri-Treat and Ri-Scape tanks and can be incorporated into septic and holding tanks to enhance effluent quality.

We recommend cleaning the filter quarterly and replacing it annually or as needed.

Poor maintenance or factors such as garbage disposals or excessive laundry may require more frequent inspections, servicing, or replacement of the filter.

Features

- Effectively filters out hair, lint, tissue, seeds, and other debris that can clog pumps and soakage trenches
- Provides excellent filtration performance
- Offers over 300 cubic inches of open area to minimise clogging
- Flexible design allows installation in hard-to-reach tees, baffles, and similar components
- Constructed from twin 2.5 mm stainless wire with black UV-stable polypropylene bristles for superior filtration and durability

Installation and removal

To install:

1. Push the Ri Bristle Filter into the top of the PVC tee inside the tank until the 90-degree wire handle rests on the top of the tee.
2. The filter is now installed, as shown in the picture.

To remove for cleaning or replacement:

1. Pull up on the wire handle to remove the filter.
2. Hose down the filter over the inlet chamber to clean it.
3. If replacing, place the used filter in a plastic bag for proper disposal.

To order

Please contact Ri-Industries

- sales@ri-industries.com.au
- 8444 8100

